

PNÖMATİK BAĞLANTI EKİPMANLARI

PLASTİK SERİ PNÖMATİK BAĞLANTI EKİPMANLARI

→ MİNİ SERİ PNÖMATİK BAĞLANTI EKİPMANLARI



MİNİ DÜZ RAKOR

PARÇA NO.	R/M	ØD
PRDM-M5-4	M5	4
PRDM-M5-6	M5	6
PRDM-1/8-4	1/8	4
PRDM-1/8-6	1/8	6



**MİNİ DÜZ RAKOR
ALTYAN TİP**

PARÇA NO.	R/M	ØD
PRDM-M3-4	M3	4
PRDM-M5-4	M5	4
PRDM-M5-6	M5	6
PRDM-M6-4	M6	4
PRDM-M6-6	M6	6
PRDM-1/8-4	1/8	4
PRDM-1/8-6	1/8	6



MİNİ DİRSEK RAKOR

PARÇA NO.	R/M	ØD
PRLM-M3-4	M3	4
PRLM-M5-4	M5	4
PRLM-M5-6	M5	6
PRLM-M6-4	M6	4
PRLM-M6-6	M6	6
PRLM-1/8-4	1/8	4
PRLM-1/8-6	1/8	6



**MİNİ UZUN DİRSEK
RAKOR**

PARÇA NO.	R/M	ØD
PRLUM-M5-4	M5	4
PRLUM-M5-6	M5	6
PRLUM-1/8-4	1/8	4
PRLUM-1/8-6	1/8	6



MİNİ T RAKOR

PARÇA NO.	ØD
PRTM-4	4
PRTM-6	6



MİNİ Y RAKOR

PARÇA NO.	ØD
PRYM-4	4
PRYM-6	6



**MİNİ YAN
BACAK T**

PARÇA NO.	R/M	ØD
PRTYM-M5-4	M5	4
PRTYM-M5-6	M5	6
PRTYM-1/8-4	1/8	4
PRTYM-1/8-6	1/8	6



**MİNİ ORTA
BACAK T**

PARÇA NO.	R/M	ØD
PRTOM-M5-4	M5	4
PRTOM-M5-6	M5	6
PRTOM-1/8-4	1/8	4
PRTOM-1/8-6	1/8	6

- KOLAY ve HIZLI MONTAJ
- KOMPAKT ve HAFİF
- ZENGİN ÜRÜN SECENEĞİ
- GENİŞ HORTUM ARALIĞI
Ø 4 mm - Ø 16 mm

→ STANDART SERİ PNÖMATİK BAĞLANTI EKİPMANLARI



DÜZ RAKOR

PARÇA NO.	R/M	ØD
PRD-1/8-4	1/8	4
PRD-1/4-4	1/4	4
PRD-1/8-6	1/8	6
PRD-1/4-6	1/4	6
PRD-3/8-6	3/8	6
PRD-1/8-8	1/8	8
PRD-1/4-8	1/4	8
PRD-3/8-8	3/8	8
PRD-1/2-8	1/2	8
PRD-1/8-10	1/8	10
PRD-1/4-10	1/4	10
PRD-3/8-10	3/8	10
PRD-1/2-10	1/2	10
PRD-1/4-12	1/4	12
PRD-3/8-12	3/8	12
PRD-1/2-12	1/2	12
PRD-1/4-16	1/4	16
PRD-3/8-16	3/8	16
PRD-1/2-16	1/2	16



**DÜZ RAKOR
ALTYAN TİP**

PARÇA NO.	R/M	ØD
PRDA-M5-4	M5	4
PRDA-1/8-4	1/8	4
PRDA-1/4-4	1/4	4
PRDA-M5-6	M5	6
PRDA-1/8-6	1/8	6
PRDA-1/4-6	1/4	6
PRDA-3/8-6	3/8	6
PRDA-1/8-8	1/8	8
PRDA-1/4-8	1/4	8
PRDA-3/8-8	3/8	8
PRDA-1/2-8	1/2	8
PRDA-1/8-10	1/8	10
PRDA-1/4-10	1/4	10
PRDA-3/8-10	3/8	10
PRDA-1/2-10	1/2	10
PRDA-1/4-12	1/4	12
PRDA-3/8-12	3/8	12
PRDA-1/2-12	1/2	12
PRDA-1/4-16	1/4	16
PRDA-3/8-16	3/8	16
PRDA-1/2-16	1/2	16



DİŞİ RAKOR

PARÇA NO.	R/M	ØD
PRDD-1/8-4	1/8	4
PRDD-1/4-4	1/4	4
PRDD-1/8-6	1/8	6
PRDD-1/4-6	1/4	6
PRDD-3/8-6	3/8	6
PRDD-1/8-8	1/8	8
PRDD-1/4-8	1/4	8
PRDD-3/8-8	3/8	8
PRDD-1/2-8	1/2	8
PRDD-1/8-10	1/8	10
PRDD-1/4-10	1/4	10
PRDD-3/8-10	3/8	10
PRDD-1/2-10	1/2	10
PRDD-1/4-12	1/4	12
PRDD-3/8-12	3/8	12
PRDD-1/2-12	1/2	12



DİRSEK RAKOR

PARÇA NO.	R/M	ØD
PRL-M5-4	M5	4
PRL-1/8-4	1/8	4
PRL-1/4-4	1/4	4
PRL-1/8-6	1/8	6
PRL-1/4-6	1/4	6
PRL-3/8-6	3/8	6
PRL-1/8-8	1/8	8
PRL-1/4-8	1/4	8
PRL-3/8-8	3/8	8
PRL-1/2-8	1/2	8
PRL-1/8-10	1/8	10
PRL-1/4-10	1/4	10
PRL-3/8-10	3/8	10
PRL-1/2-10	1/2	10
PRL-1/8-12	1/8	12
PRL-1/4-12	1/4	12
PRL-3/8-12	3/8	12
PRL-1/2-12	1/2	12
PRL-1/4-16	1/4	16
PRL-3/8-16	3/8	16
PRL-1/2-16	1/2	16



**UZUN DİRSEK
RAKOR**

PARÇA NO.	R/M	ØD
PRLU-M5-4	M5	4
PRLU-1/8-4	1/8	4
PRLU-M5-6	M5	6
PRLU-1/8-6	1/8	6
PRLU-1/4-6	1/4	6
PRLU-3/8-6	3/8	6
PRLU-1/4-8	1/4	8
PRLU-3/8-8	3/8	8
PRLU-1/2-8	1/2	8
PRLU-1/8-10	1/8	10
PRLU-1/4-10	1/4	10
PRLU-3/8-10	3/8	10
PRLU-1/2-10	1/2	10
PRLU-1/4-12	1/4	12
PRLU-3/8-12	3/8	12
PRLU-1/2-12	1/2	12



**DİŞİ DİRSEK
RAKOR**

PARÇA NO.	R/M	ØD
PRLD-1/8-4	1/8	4
PRLD-1/4-4	1/4	4
PRLD-1/8-6	1/8	6
PRLD-1/4-6	1/4	6
PRLD-3/8-6	3/8	6
PRLD-1/8-8	1/8	8
PRLD-1/4-8	1/4	8
PRLD-3/8-8	3/8	8
PRLD-1/2-8	1/2	8
PRLD-1/8-10	1/8	10
PRLD-1/4-10	1/4	10
PRLD-3/8-10	3/8	10
PRLD-1/2-10	1/2	10
PRLD-1/4-12	1/4	12
PRLD-3/8-12	3/8	12
PRLD-1/2-12	1/2	12



**YAN
BACAK T**

PARÇA NO.	R/M	ØD
PRTY-M5-4	M5	4
PRTY-1/8-4	1/8	4
PRTY-M5-6	M5	6
PRTY-1/8-6	1/8	6
PRTY-1/4-6	1/4	6
PRTY-3/8-6	3/8	6
PRTY-1/8-8	1/8	8
PRTY-1/4-8	1/4	8
PRTY-3/8-8	3/8	8
PRTY-1/2-8	1/2	8
PRTY-1/8-10	1/8	10
PRTY-1/4-10	1/4	10
PRTY-3/8-10	3/8	10
PRTY-1/2-10	1/2	10
PRTY-1/4-12	1/4	12
PRTY-3/8-12	3/8	12
PRTY-1/2-12	1/2	12



**ORTA
BACAK T**

PARÇA NO.	R/M	ØD
PRTO-M5-4	M5	4
PRTO-1/8-4	1/8	4
PRTO-M5-6	M5	6
PRTO-1/8-6	1/8	6
PRTO-1/4-6	1/4	6
PRTO-3/8-6	3/8	6
PRTO-1/8-8	1/8	8
PRTO-1/4-8	1/4	8
PRTO-3/8-8	3/8	8
PRTO-1/2-8	1/2	8
PRTO-1/8-10	1/8	10
PRTO-1/4-10	1/4	10
PRTO-3/8-10	3/8	10
PRTO-1/2-10	1/2	10
PRTO-1/4-12	1/4	12
PRTO-3/8-12	3/8	12
PRTO-1/2-12	1/2	12



ORTA BACAK Y

PARÇA NO.	R/M	ØD
PRYO-M5-4	M5	4
PRYO-1/8-4	1/8	4
PRYO-M5-6	M5	6
PRYO-1/8-6	1/8	6
PRYO-1/4-6	1/4	6
PRYO-3/8-6	3/8	6
PRYO-1/8-8	1/8	8
PRYO-1/4-8	1/4	8
PRYO-3/8-8	3/8	8
PRYO-1/2-8	1/2	8
PRYO-1/8-10	1/8	10
PRYO-1/4-10	1/4	10
PRYO-3/8-10	3/8	10
PRYO-1/2-10	1/2	10
PRYO-1/4-12	1/4	12
PRYO-3/8-12	3/8	12
PRYO-1/2-12	1/2	12



**DİŞİ PERDE
GEÇİŞ NİPLİ**

PARÇA NO.	ØD	ØD
PRP-4	4	4
PRDP-1/4-4	1/4	4
PRP-6	6	6
PRDP-1/8-6	1/8	6
PRDP-1/4-6	1/4	6
PRDP-3/8-6	3/8	6
PRDP-1/8-8	1/8	8
PRDP-1/4-8	1/4	8
PRDP-3/8-8	3/8	8
PRDP-1/2-8	1/2	8
PRDP-1/8-10	1/8	10
PRDP-1/4-10	1/4	10
PRDP-3/8-10	3/8	10
PRDP-1/2-10	1/2	10
PRDP-1/4-12	1/4	12
PRDP-3/8-12	3/8	12
PRDP-1/2-12	1/2	12



**PERDE GEÇİŞ
NİPLİ**

PARÇA NO.	ØD	ØD
PRP-4	4	4
PRP-6	6	6
PRP-8	8	8
PRP-10	10	10
PRP-12	12	12



T RAKOR

PARÇA NO.	ØD	ØD
PRT-4	4	4
PRT-6	6	6
PRT-8	8	8
PRT-10	10	10
PRT-12	12	12
PRT-16	16	16



**T RAKOR
DÜŞÜRÜCÜ**

PARÇA NO.	ØD	ØD
PRTD-6-4-4	6	4
PRTD-8-6-6	8	6
PRTD-8-6-8	8	6
PRTD-8-8-8	8	8
PRTD-10-8-8	10	8
PRTD-8-10-10	8	10
PRTD-12-10-10	12	10
PRTD-10-12-12	10	12



Y RAKOR

PARÇA NO.	ØD	ØD
PRY-4	4	4
PRY-6	6	6
PRY-8	8	8
PRY-10	10	10
PRY-12	12	12
PRY-16	16	16



**Y RAKOR
DÜŞÜRÜCÜ**

PARÇA NO.	ØD	ØD
PRYD-6-4	6	4
PRYD-8-6	8	6
PRYD-10-8	10	8
PRYD-12-10	12	10



KRUYA RAKOR

PARÇA NO.	ØD	ØD
PRQ-4	4	4
PRQ-6	6	6
PRQ-8	8	8
PRQ-10	10	10
PRQ-12	12	12



**HORTUM
KÖRLEME**

PARÇA NO.	ØD	ØD
PRKH-4	4	4
PRKH-6	6	6
PRKH-8	8	8
PRKH-10	10	10
PRKH-12	12	12
PRKH-16	16	16



RAKOR DÜŞÜRÜCÜ

PARÇA NO.	ØD	ØD
PRRD-6-4	6	4
PRRD-8-6	8	6
PRRD-8-6	8	6
PRRD-10-6	10	6
PRRD-10-8	10	8
PRRD-12-8	12	8
PRRD-12-10	12	10



RAKOR DİRSEK

PARÇA NO.	ØD	ØD
PRRL-4	4	4
PRRL-6	6	6
PRRL-8	8	8
PRRL-10	10	10
PRRL-12	12	12



**DİRSEK
RAKOR DÜŞÜRÜCÜ**

PARÇA NO.	ØD	ØD
PRRLD-6-4	6	4
PRRLD-8-6	8	6
PRRLD-8-6	8	6
PRRLD-10-6	10	6
PRRLD-10-8	10	8
PRRLD-12-8	12	8
PRRLD-12-10	12	10